

# EYP-DFB-0795-00080-1500-BFW01-0005

Revision 0.91

2023-09-25

## SINGLE FREQUENCY LASER DFB Laser



### General Product Information

Product	Application
795 nm DFB Laser	Spectroscopy (Rb D1 line)
with hermetic 14-Pin Butterfly Housing (RoHS compliant)	Metrology
including Monitor Diode, Thermoelectric Cooler and Thermistor	
with integrated Beam Collimation	

### Absolute Maximum Ratings

Parameter	Symbol	Unit	min	typ	max
Storage Temperature	$T_S$	°C	-40		85
Operational Temperature at Case	$T_C$	°C	-40		85
Operational Temperature at Chip	$T_{chip}$	°C	5		50
Forward Current	$I_F$	mA			170
Reverse Voltage	$V_R$	V			2
Output Power	$P_{opt}$	mW			90
TEC Current	$I_{TEC}$	A			1.1
TEC Voltage	$V_{TEC}$	V			2.8

### Recommended Operational Conditions

Parameter	Symbol	Unit	min	typ	max
Operational Temperature at Case	$T_{case}$	°C	-20		60
Operational Temperature at Chip	$T_{chip}$	°C	10		45
Forward Current	$I_F$	mA			160
Output Power	$P_{opt}$	mW	20		80

### Characteristics $T_{chip} = 25^\circ$ at BOL

Parameter	Symbol	Unit	min	typ	max
Center Wavelength	$\lambda_C$	nm	794	795	796
Target Wavelength	$\lambda_T$	nm		794.98	
Linewidth	$\Delta\lambda$	MHz		0.6	1
Mode-hop free Tuning Range	$\Delta\lambda_{tune}$	pm	25		
Sidemode Suppression Ratio	SMSR	dB	30	45	
Temp. Coefficient of Wavelength	$d\lambda / dT$	nm/K		0.06	
Current Coefficient of Wavelength	$d\lambda / dI$	nm/mA		0.003	



#### Measurement Conditions / Comments

Stress in excess of one of the Absolute Maximum Ratings may damage the laser. Please note that a damaging optical power level may occur although the maximum current is not reached. These are stress ratings only, and functional operation at these or any other conditions beyond those indicated under Recommended Operational Conditions is not implied.

#### Measurement Conditions / Comments

measured by integrated Thermistor

#### Measurement Conditions / Comments

$T_{chip} = 10^\circ \dots 45^\circ$  C at  $P_{opt} = 80$  mW

FWHM,  $P_{opt} = 80$  mW

> 10 GHz, at target wavelength

$P_{opt} = 80$  mW

# EYP-DFB-0795-00080-1500-BFW01-0005

Revision 0.91

2023-09-25

## SINGLE FREQUENCY LASER DFB Laser



### Characteristics Tchip = 25° at BOL

Parameter	Symbol	Unit	min	typ	max
Laser Current	$I_{LD}$	mA			160
Slope Efficiency	$\eta$	mW/mA		0.8	
Threshold Current	$I_{th}$	mA			70
Divergence parallel	$\Theta_{  }$	°		0.1	
Divergence perpendicular	$\Theta_{\perp}$	°		0.1	
Beam Diameter horizontal	$d_{  }$	mm		1	1.2
Beam Diameter vertical	$d_{\perp}$	mm		0.8	1.2
Degree of Polarization	DOP	%		99	

### Measurement Conditions / Comments

Popt = 80 mW
parallel to the base plate of the housing
perpendicular to base plate of the housing
parallel to the base plate of the housing
perpendicular to base plate of the housing
Popt = 80 mW; vertical polarization

### Monitor Diode

Parameter	Symbol	Unit	min	typ	max
Monitor Detector Responsivity	$I_{mon} / P_{of}$	$\mu A/mW$	1		20

### Measurement Conditions / Comments

5 V
-----

### Thermoelectric Cooler

Parameter	Symbol	Unit	min	typ	max
Current	$I_{TEC}$	A		0.4	
Voltage	$U_{TEC}$	V		1.3	
Power Dissipation (total loss at case)	$P_{loss}$	W		0.4	
Temperature Difference	$\Delta T$	K			50

### Measurement Conditions / Comments

Popt = 80 mW, $\Delta T = 20$ K
Popt = 80 mW, $\Delta T = 20$ K
Popt = 80 mW, $\Delta T = 20$ K
Popt = 80 mW, $\Delta T =  T_{case} - T_{chip} $

### Thermistor (Standard NTC Type)

Parameter	Symbol	Unit	min	typ	max
Resistance	R	k $\Omega$		10	
Beta Coefficient	$\beta$			3892	
Steinhart & Hart Coefficient A	A			$1.1293 \times 10^{-3}$	
Steinhart & Hart Coefficient B	B			$2.3410 \times 10^{-4}$	
Steinhart & Hart Coefficient C	C			$8.7755 \times 10^{-8}$	

### Measurement Conditions / Comments

Tchip = 25° C
$R_1/R_2 = e^{\beta(1/T_1 - 1/T_2)}$ at Tchip = 0° ... 50° C
$1/T = A + B(\ln R) + C(\ln R)^3$
T: Temperature in Kelvin
R: resistance at T in $\Omega$

# EYP-DFB-0795-00080-1500-BFW01-0005

Revision 0.91


2023-09-25

## SINGLE FREQUENCY LASER DFB Laser





### Pin Assignment

1	Thermoelectric Cooler (+)	14	Thermoelectric Cooler (-)
2	Thermistor	13	Case
3	Photo Diode Anode	12	not connected
4	Photo Diode Cathode	11	Laser Diode Cathode
5	Thermistor	10	Laser Diode Anode
6	not connected	9	not connected
7	not connected	8	not connected

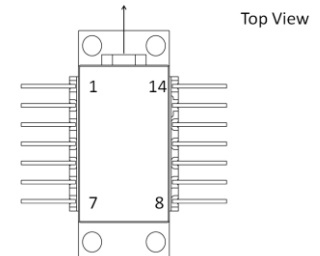

### Package Drawings

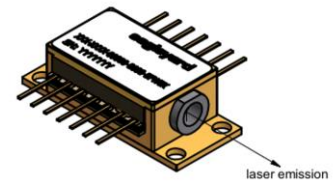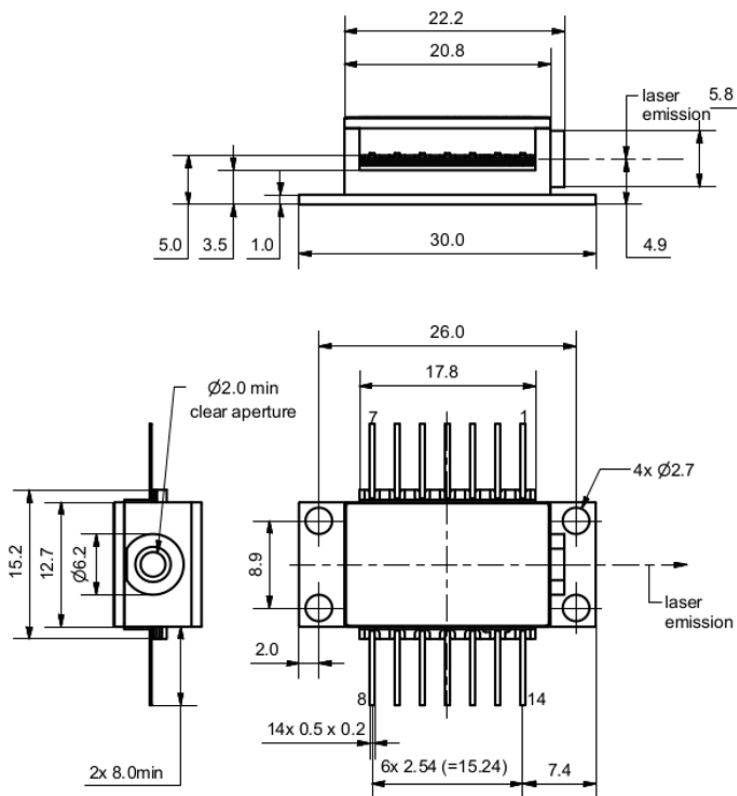

AIZ-20-1029-0928

# EYP-DFB-0795-00080-1500-BFW01-0005

Revision 0.91

2023-09-25

## SINGLE FREQUENCY LASER DFB Laser



### Unpacking, Installation and Laser Safety


Unpacking the laser diodes should only be done at electrostatic safe workstations (EPA). Though protection against electro static discharge (ESD) is implemented in the laser package, charges may occur at surfaces. Please store this product in its original package at a dry, clean place until final use. During device installation, ESD protection has to be maintained.

A laser diode is sensitive against optical feedback, so an optical isolator may be required in order to avoid any disturbance of the emission spectrum. Operating at moderate temperatures on proper heat sinks will contribute to a long lifetime of the diode.

Avoid direct and/or indirect exposure to the free running beam. Collimating and focussing the free running beam with optics as common in optical instruments will increase threat to the human eye.

Each laser diode will come with an individual test protocol verifying the parameters given in this document.

Performance figures, data and any illustrative material provided in this specification are typical and must be specifically confirmed in writing by eagleyard Photonics before they become applicable to any particular order or contract. In accordance with the eagleyard Photonics policy of continuous improvement specifications may change without notice.

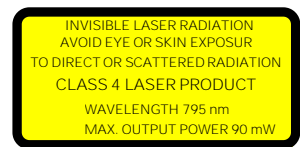

IEC-60825-1

